


EF AP1 & AP2 INSTRUCTIONS

INSTALL INSTRUCTIONS:

1. IDENTIFY YOUR CLUSTER CONNECTOR LOCATED ABOVE YOUR FUSE BOX
2. ONCE YOU HAVE IDENTIFIED YOUR CONNECTOR YOU WILL NEED TO SPLICE THE 7 LOOSE WIRES TO YOUR MATCHING CONNECTOR.
3. THE LOOSE WIRES ARE AS FOLLOWS:

1. YELLOW/BLUE
2. YELLOW/GREEN
3. GREEN/BLACK
4. BLUE
5. YELLOW/RED
6. BLACK/BLUE
7. ORANGE/BLUE

PLEASE NOTE YOU MUST BE RUNNING A 92+ ELECTRONIC SPEED SENSOR AS WELL AS A KTUNED ALL-IN-ONE CONVERTOR. WHICH WILL REQUIRE SOME FINE TUNING ONCE CLUSTER IS RUNING.

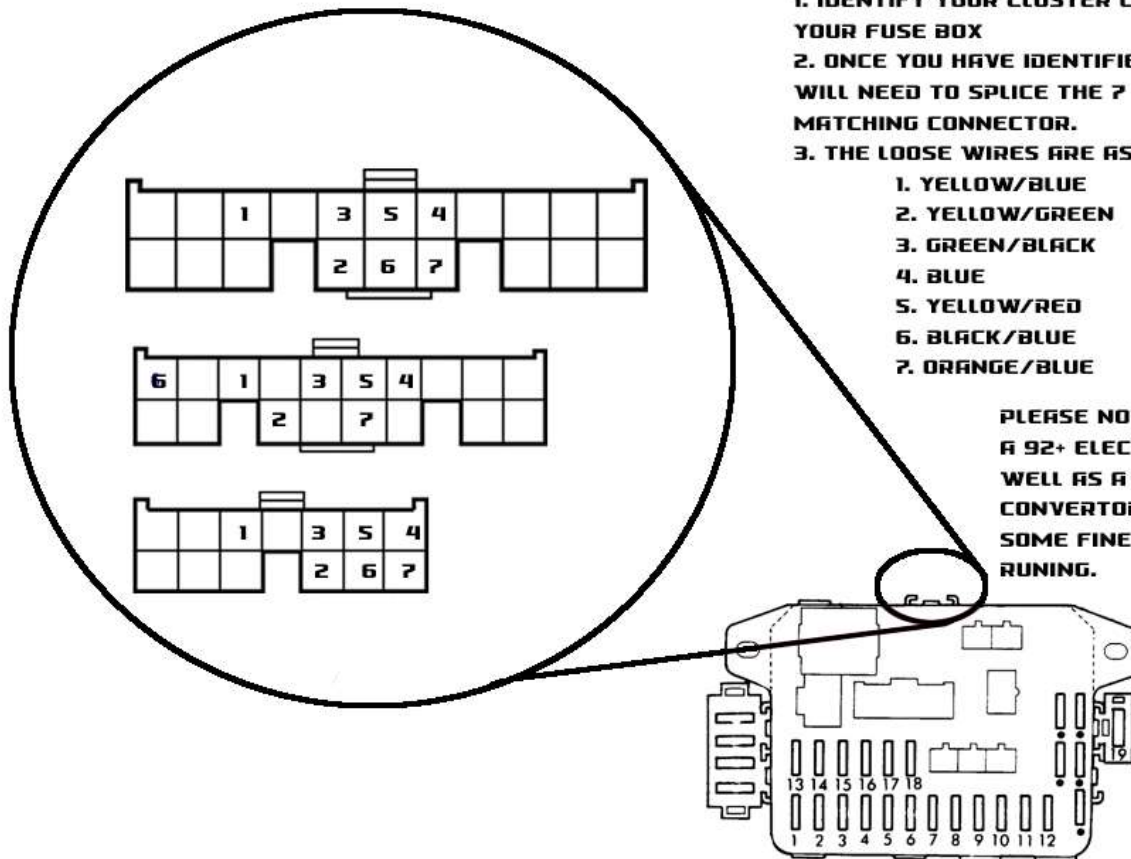

FACEBOOK.COM/CJS.WIRING

IG C_ZAPIEN

EMAIL C2APIEN82@GMAIL.COM

STORE LINK

HTTP://WWW.CJS-WIRING.COM